

Roller Blinds


Installation Information

Before installing brackets please ensure that surface is secure, clean and level. Incorrect installation will void warranty.

INSTALLING THE BLIND


Chain operated / Easydrive / Recess + Face Fix

Note: When installing blind please put clutch end in first

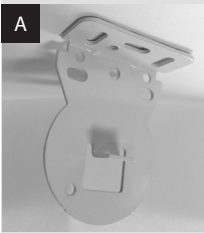

A


Choose clutch end bracket. Using allocated holes, fix bracket to surface. Ensure bracket is level and secure.

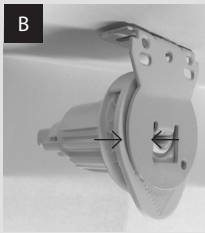

B

Insert clutch end into horizontal slots for **recess fix**.


Please ensure that clutch chain cover is always on top of clutch mechanism.

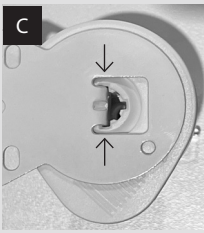

C


Insert clutch end into vertical slots for **face fix**.

Please ensure that clutch chain cover is always on top of clutch mechanism.

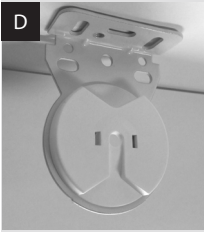


D

Choose pin end bracket. Using allocated holes, fix bracket to surface. Ensure bracket is level and secure.

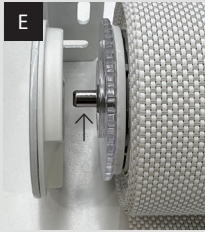

E

Push pin inwards and towards groove allocated on the bracket. With a gentle upwards push, pin will engage securely into bracket slot.

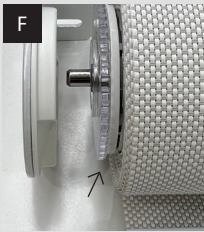


F

To remove blind please turn clear cog at pin end in an anti-clockwise direction and carefully pull the blind off the bracket.


INSTALLING THE CHAIN TENSIONING DEVICE

Tensioning Devices reduce the chance of strangulation by limiting access to the control chain. When fitted properly it should hold any looped controls firmly tensioned against an architrave or window frame in a position that will not compromise the operation of the control chain.

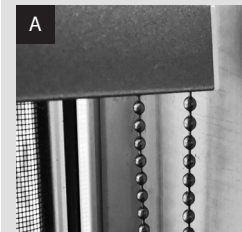


A

Make sure the controls are not twisted when fitting the Tension Device and ensure that there is **SUFFICIENT TENSION** on the chain - loose and excessive tension will impair smooth operation of the blind.

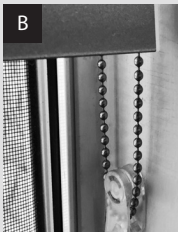

B

Hold the Tension Device in the correct position and insert the chain through the bottom of the tensioner.




C

Secure the screw through the hole, making sure the screw is affixed into architrave or window frame (solid material like MDF or Hardwood)

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove warning label.

ASSEMBLY

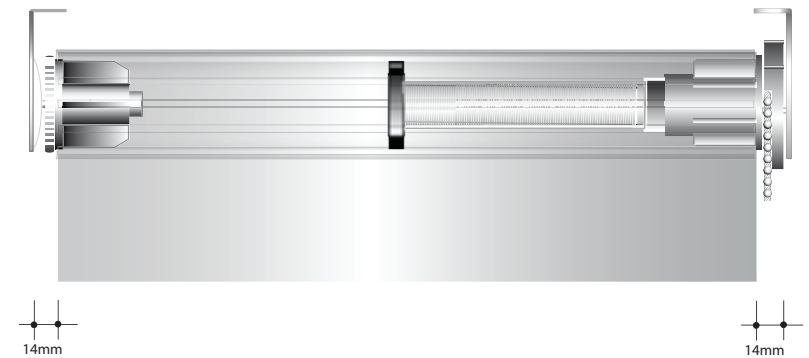

REFERENCES

