

Aluminium Venetian Blinds

Installation Information

Before installing brackets please ensure that surface is secure, clean and level.

Do not mount the hidden brackets directly over the blind's interior hardware.

Do not overtighten screws when inserting brackets as you may distort the brackets.



Incorrect installation will void warranty.

INSTALLING THE BLIND



Slimline/Monocommand/Midnighter/Recess + Face fix



1. Ensure brackets are fitted to desired Face fix or recess position. Ensure brackets are level with each other.

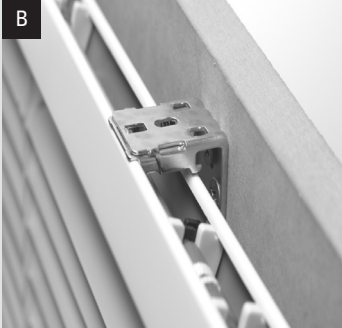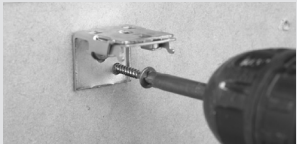

2. Place front lip of internal headbox extrusion on bracket lip by tipping the blind rearward.

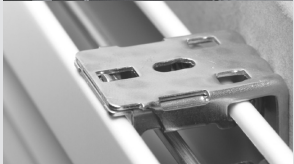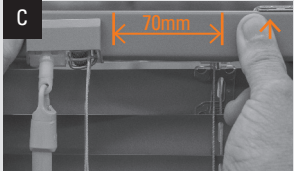


3. With a gentle even push on headbox, engage spring of bracket. This will allow the back of the headbox extrusion to engage onto the back of the bracket.

Wideline



Please refer to the instructions above.

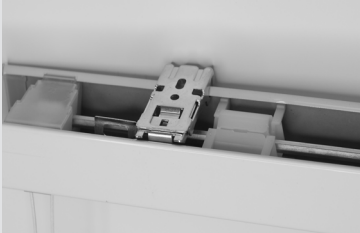


Please refer to the instructions above.




Please refer to the instructions above.

INSTALLING THE CHAIN TENSIONING DEVICE

Tensioning Devices reduce the chance of strangulation by limiting access to the control chain. When fitted properly it should hold any looped controls firmly tensioned against an architrave or window frame in a position that will not compromise the operation of the control chain.

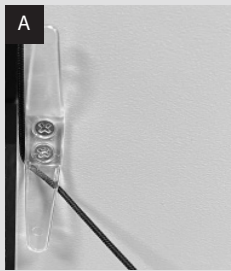

Make sure the controls are not twisted when fitting the Tension Device and ensure that there is SUFFICIENT TENSION on the cord - loose and excessive tension will impair smooth operation of the blind.

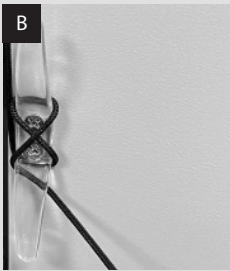

Hold the Tension Device in the correct position and secure the cord by making a figure eight around the Tensioner.



Secure fully into position by circling around the outside on the Tensioner.

WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove warning label.

Recommended spacing of Bracket

For Cordlock & Wand, Monocommand blind & Midnighter bracket spacing is similar.

70mm from end of blind is recommended distance for ample clearance from internal hardware.

By deducting 70mm approx. from either end of the blind width, will give you approx. 70mm hidden bracket spacing.

Ensure brackets are fitted between the cordlock and tape roll support. Bracket spacing is the same for face fix and recess fix application.

Your blind package is complete with the recommended amount of hidden brackets for your blinds. Do not mount the hidden brackets directly over the Blind's Interior Hardware and do not overtighten screws when installing as you may distort the brackets. Please note that this is void of warranty.