

# Timber Venetian Blinds

## Installation Information

Before installing brackets please ensure that surface is secure, clean and level.


Do not mount the hidden brackets directly over the blind's interior hardware.

Do not overtighten screws when inserting brackets as you may distort the brackets.



Incorrect installation will void warranty.

### INSTALLING THE BLIND

#### Ultrawood / Face Fix / Recess

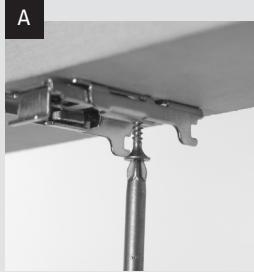


Ensure brackets are fitted to desired Face Fix or Recess position. Ensure brackets are level with each other.

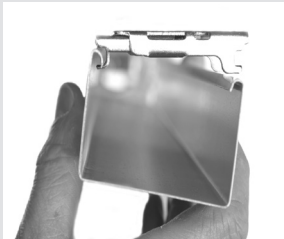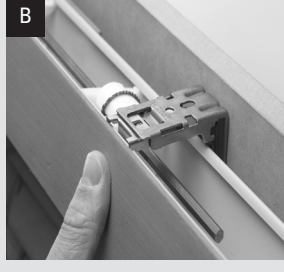

Place front lip of internal headbox extrusion on bracket lip by tipping the blind rearward.


With a gentle even push on the headbox, engage spring of bracket. This will allow the back of the headbox extrusion to engage onto the back of the bracket.

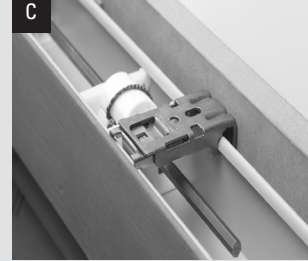


Headbox securely fixed to hidden bracket.

### INSTALLING THE CHAIN TENSIONING DEVICE

Tensioning Devices reduce the chance of strangulation by limiting access to the control chain. When fitted properly it should hold any looped controls firmly tensioned against an architrave or window frame in a position that will not compromise the operation of the control chain.

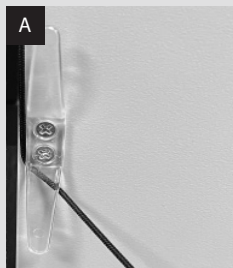

Make sure the controls are not twisted when fitting the Tension Device and ensure that there is SUFFICIENT TENSION on the cord - loose and excessive tension will impair smooth operation of the blind.

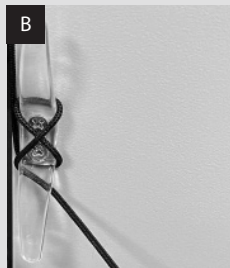

Hold the Tension Device in the correct position and secure the cord.



Secure the screw through the hole making sure the screw affixed into architrave or window frame.

**WARNING: Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains. Do not remove warning label.**

## Recommended spacing of Bracket

For Ultrawood, Face fix or Recess, bracket spacing is similar.

By deducting 200mm on control side and 100mm on the opposite end. Bracket spacing is the same for face fix and recess fix application.

Your blind package is complete with the recommended amount of hidden brackets for your blinds. Do not mount the hidden brackets directly over the Blind's Interior Hardware and do not overtighten screws when installing as you may distort the brackets. Please note that this is void of warranty.

It is also, recommended to rotate slats so they receive an even amount of sunlight on both sides of the slat. This will minimise chances of bowing and uneven discolouration of your product.